



Shenzhen Yunyue Intelligent Technology Co., Ltd.

Address: Room 901, Block A, Huahan Innovation Park, Langshan Road, Nanshan District, Shenzhen, Guangdong, P.R.C.

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.

This product has been manufactured by and is sold under the responsibility of Shenzhen Yunyue Intelligent Technology Co., Ltd. and Shenzhen Yunyue Intelligent Technology Co., Ltd. is the warrantor of this product.

© 2023 Koninklijke Philips N.V. All rights reserved. Philips smart safe box reserves the rights to change content and product specifications included in this user manual without prior notice at any time.

Version: 1.0

PHILIPS

6000 Series

Smart safe box

SBX601

User manual



To register your product as well as obtain support, please go to:
www.philips.com/support

Models and dimensions

Models	Outside dimensions (H×W×D)	Weight
SBX601-4B0	450×380×360 mm	29.5 kg
FDG-A10/D-55-SBX601-5B0	550×400×360 mm	67.7 kg
FDG-A10/D-65-SBX601-6B0	650×430×390 mm	84.0 kg
FDG-A10/D-75-SBX601-7B0	750×480×430 mm	106.0 kg
FDG-A10/D-85-SBX601-8B0	850×500×460 mm	123.0 kg

Please read this user manual carefully before using this product.

Thank you for purchasing Philips-branded products. For your safety, please read this user manual carefully before using the product. Any personal injury, property or other loss caused by not following the user manual or precautions, no liability will be assumed by Philips.

Kind reminder:

This user manual is used as a guide. The photos, pictures, or illustrations provided in the manual are for explanation purposes, which may differ from the specific product, please refer to the actual product. Due to product version upgrade or other needs, Philips may update this manual timely without prior notice. If you need the latest version of the manual, please download it from the Philips website (www.philips.com/support). The copyright of any part from this manual, including text, pictures or illustrations, belongs to Philips. Without written permission, no corporation or individual may extract, copy, translate, or modify all or part of this manual in any way. Unless otherwise agreed, Philips does not make any expressions or implied representations and guarantees.



Content

Get to know your smart safe box	01
Keypad	03
First use	04
Add fingerprint and PIN code	05
Delete fingerprint and PIN code	06
Safe mode	07
Keyhole cover	08
Language setting	09
False alert	09
Vibrant alert	10
Low-voltage alert	11
Wall-mount instructions	11
After-sales policies	13
After-sales support	14
Warranty card	15


Get to know your smart safe box

1. Keypad
2. Handle
3. Door
4. Base
5. Drawer
6. Divider board
7. Lock cylinder
8. Battery compartment

⚠ Attention:
due to limited internal space,
350 mm and 450 mm high safes
are designed with no drawer.

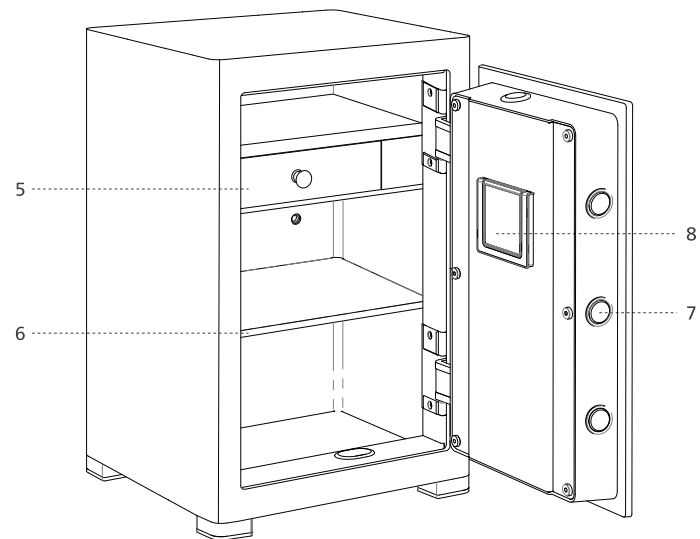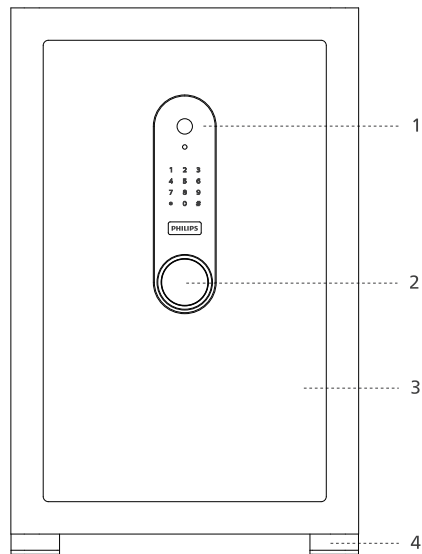

Keypad

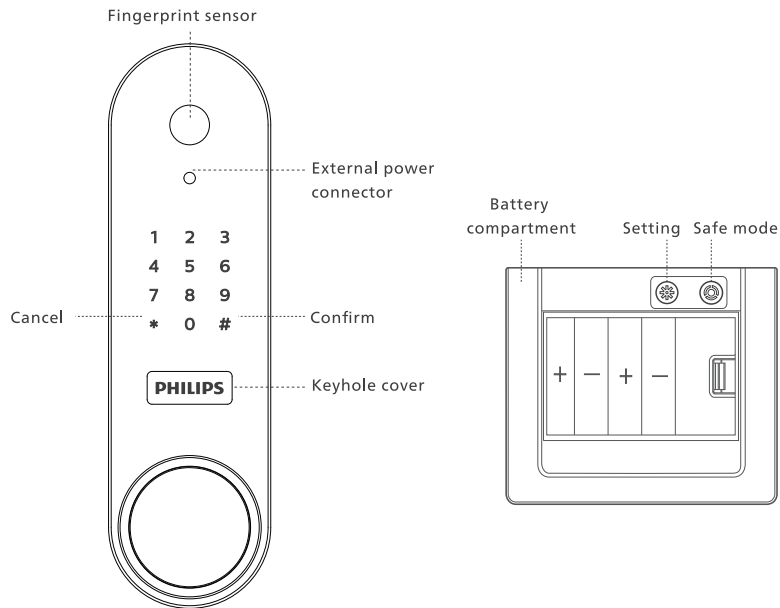

First use

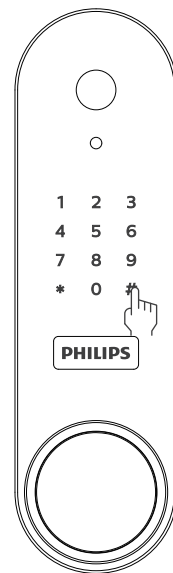


Figure 1

1. Insert 4 AA batteries into the external battery box, then plug it in the external power connector on the safe.
2. As shown in Figure 1, enter any fingerprint or simply touch the panel to wake up the keypad. Enter default PIN code '1234' and press '#' to confirm. After hearing a voice prompt 'Unlocking successful', open battery compartment inside the safe and insert in 4 AA batteries to complete the first use.

⚠ Attention: do not place the external battery box inside the safe! Besides powering up the safe for its first use, the external battery box is also for emergency use when the main power supply is down.

Add fingerprint and PIN code

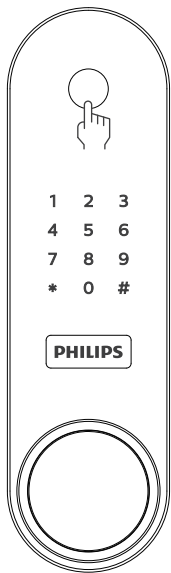


Figure 2

1. Open safe door and press the red setting button '  ' on the battery compartment. After hearing a voice prompt 'Please enter fingerprint or PIN code', enter your fingerprint as shown in Figure 2. A voice prompt 'Fingerprint entering succeeded,' indicates successful operation. If the entering fails, there will be a voice prompt 'Fingerprint entering failed'. The system will automatically exit if there is no entering in 8 seconds.

 **Attention:**
this product supports a maximum of 30 fingerprints.

2. After the fingerprint is successfully entered, you can continue with PIN code entering. Enter a 3 - 8 digit PIN code and press '#' to confirm. There will be a voice prompt 'Please enter your PIN code again'. Enter the PIN code again and press '#' to confirm. There will be a voice prompt 'PIN code entering successful', indicating successful operation.

 **Attention:**
this product supports a maximum of 10 sets of PIN codes.

Delete fingerprint and PIN code

As shown in Figure 3, long press the red setting button '  ' on the battery compartment for 3 seconds. There will be a voice prompt 'Initialization successful', indicating that all PIN codes and fingerprints have been successfully deleted and the safe has restored to factory settings.

Attention

1. This product does not support deleting single fingerprint or PIN code.
2. After the system restores to factory settings, 'Vibration alert' and 'Safe mode' will also return to the initial settings, namely being off.

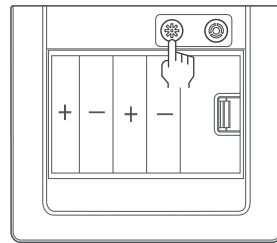


Figure 3

Safe mode

1. Under 'Safe mode', a combination of 2 registered passwords are required to unlock the safe, either 'fingerprint + fingerprint', 'fingerprint + PIN code', 'PIN code + fingerprint' or 'PIN code + PIN code'.
2. As shown in Figure 4, press the black safe mode button '  ' on the battery compartment and there will be a voice prompt 'Safe mode is on', indicating successful activation. Press the button again can turn 'Safe mode' off.

⚠ Attention:
under 'Standard mode', any one set of registered PIN code or fingerprint can unlock the safe.


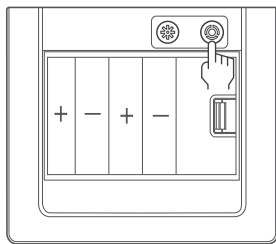


Figure 4

Keyhole cover

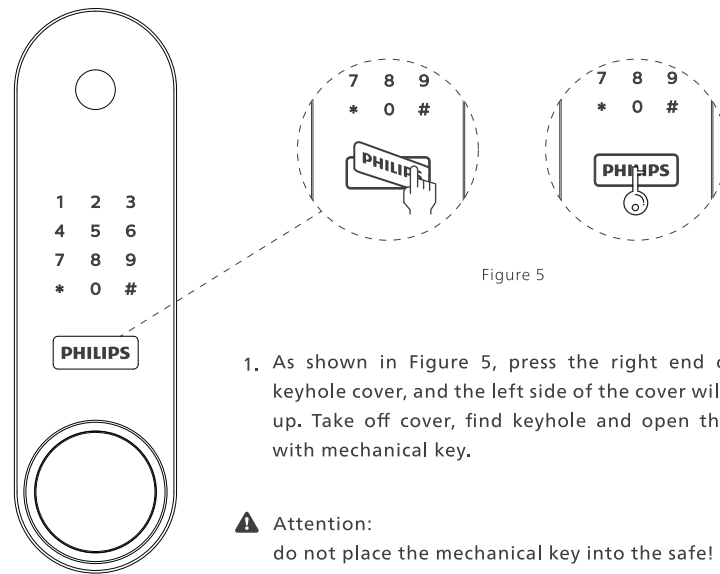

1. As shown in Figure 5, press the right end of the keyhole cover, and the left side of the cover will jump up. Take off cover, find keyhole and open the safe with mechanical key.

⚠ Attention:
do not place the mechanical key into the safe!

Language setting

Keep the battery compartment unpowered, long press the red setting button '  'on it and do not release. Put batteries into the compartment to power the safe up, and release the button until hearing a beep, then short press the 'Setting' button 4 times to switch system language between Chinese and English. The switch will complete in 4-5 seconds.

 Attention: the default language is Chinese.

False alert

5 times of wrong fingerprint entering or 3 times of wrong PIN code entering will activate false alert. The high-pitch sound alert will last for 20 seconds, while the system to be locked for 180 seconds.

 Attention:
the safe can not be operated under 'Locked' state caused by false alert.

Vibrant alert

1. As shown in Figure 6, long press the black safe mode button '  'for 3 seconds. There will be a voice prompt 'Vibration alert is on', indicating successful operation. Long press it for another 3 seconds can turn the 'Vibration alert' off.
2. When the safe detects a certain intensity of vibration, it will activate a 20-second vibration alert. Any registered fingerprint or PIN code can be used to stop the alert.

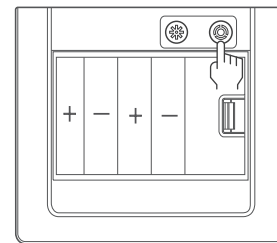


Figure 6

Low-voltage alert

If the voltage of the main power supply goes below 4.8 V, the system will activate a 'Low-voltage alert'. When using the safe, you will be reminded with a voice prompt 'Low voltage, please replace battery'. Once having this alert, please replace batteries in time.

⚠ Attention:

low-voltage may affect the normal use of the safe. Please replace batteries in time when receiving low-voltage alert.

Wall-mount instructions

As shown in Figure 7, select an appropriate installation position, open the safe door and take out the plugs on the back panel. Mark hole positions on the wall or cabinet and drill holes for expansion tubes. Put expansion tubes in the holes, attach the safe and fix it with screws.

⚠ Attention

1. Concrete wall is recommended for mounting the safe.
2. For safety reasons, please make sure the safe is firmly attached to the wall.

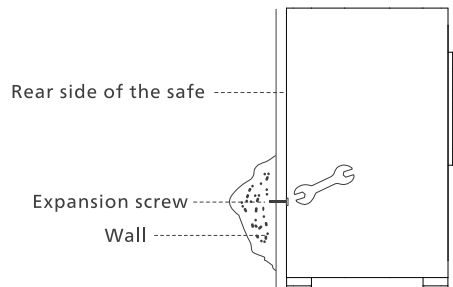


Figure 7

After-sales policies

Philips smart safe box warrants:

1. Return or replacement of products that have defects caused by non-human factors or force majeure within 7 days from the date of purchase;
2. Replacement or maintenance of products that have defects caused by non-human factors or force majeure within 8-15 days from the date of purchase;
3. Maintenance of products that have defects caused by non-human factors or force majeure within 24 months from the date of purchase;

This warranty does not apply to (including but not limited to):

1. Damages of product caused by unauthorized repairs, misuse, incorrect use, abuse, collision, negligence, fluid intake, accidents, modification and alterations;
2. Products with broken or altered labels, serial number and anti-counterfeit label;
3. Products out of warranty period;
4. Damages caused by force majeure;
5. Damages due to human factors.

After-sales support

If you encounter any problems when using the product, please contact local authorized distributors.

Warranty card

Product model		Product serial number		
Invoice No.		Seller		
Address of seller				
Date of sales		User name		
Contact of user		Address of user		
Failure description				
Maintenance records	Date	Issue	Maintenance staff	User signature